

負荷回路・客電

場所	回路No.	DMX
3トラス	1	001
	2	002
	3	003
	4	004
	5	005
	6	006
	7	007
	8	008
	9	009
	10	010
	11	011
	12	012
	13	013
	14	014
	15	015
	16	016

場所	回路No.	DMX
2トラス	1	017
	2	018
	3	019
	4	020
	5	021
	6	022
	7	023
	8	024
	9	025
	10	026
	11	027
	12	028
	13	029
	14	030
	15	031
	16	032

場所	回路No.	DMX
1トラス	1	033
	2	034
	3	035
	4	036
	5	037
	6	038
	7	039
	8	040
	9	041
	10	042
	11	043
	12	044
	13	045
	14	046
	15	047
	16	048

場所	回路No.	DMX
LB-1	1	049
	2	050
	3	051
	4	052
	5	053
	6	054
	7	055
	8	056
	9	057
	10	058
	11	059
	12	060
	13	061
	14	062
	15	063
	16	064
LB-2	1	065
	2	066
	3	067
	4	068
	5	069
	6	070
	7	071
	8	072
	9	073
	10	074
	11	075
	12	076
	13	077
	14	078
	15	079
	16	080

場所	回路No.	DMX
LB-3	1	081
	2	082
	3	083
	4	084
	5	085
	6	086
	7	087
	8	088
	9	089
LB-4	1	090
	2	091
	3	092
	4	093
	5	094
	6	095
	7	096
	8	097
	9	098
LB-5	1	099
	2	100
	3	101
	4	102
	5	103
	6	104
	7	105
	8	106
	9	107

場所	回路No.	DMX
LB-6	1	108
	2	109
	3	110
	4	111
	5	112
	6	113
	7	114
	8	115
	9	116
LB-7	1	117
	2	118
	3	119
	4	120
	5	121
	6	122
	7	123
	8	124
	9	125
LB-8	1	126
	2	127
	3	128
	4	129
	5	130
	6	131
	7	132
	8	133
	9	134

場所	回路No.	DMX
LB-9	1	135
	2	136
	3	137
	4	138
	5	139
	6	140
	7	141
	8	142
	9	143
LB-10	1	144
	2	145
	3	146
	4	147
	5	148
	6	149
	7	150
	8	151
	9	152

場所	回路No.	DMX
奥WC 上	1	153
	2	154
	3	155
	4	156
	5	157
	6	158
	7	159
	8	160
奥WC 下	1	161
	2	162
	3	163
	4	164
	5	165
	6	166
	7	167
	8	168
袖WC 上	1	169
	2	170
	3	171
	4	172
	5	173
	6	174
	7	175
	8	176
袖WC 下	1	177
	2	178
	3	179
	4	180
	5	181
	6	182
	7	183
	8	184

場所	回路No.	DMX
客席WC 上	1	185
	2	186
客席WC 下	1	187
調光室	1	188

名称		場所	DMX
客電	1	ステージ 奥	189
	2	ステージ 前	190
	3	客席 前	191
	4	客席 後	192
	5	ステージ袖 壁前	193
	6	ステージ袖 壁奥	194
	7	客席 壁 上前	195
	8	客席 壁 下前	196
	9	客席 壁 上後	197
	10	客席 壁 下後	198
	前室 サイド ※		199
	前室 ブース下 ※		200

※ = 下限あり

効果機器

機材名	#	Channel	DMX
KM LED ver.2	#1	Dim	301
		R	302
		G	303
		B	304
		W	305
		ColorMix	306
		Strobe	307
	#2	Dim	308
		R	309
		G	310
		B	311
		W	312
		ColorMix	313
		Strobe	314
	#3	Dim	315
		R	316
		G	317
		B	318
		W	319
		ColorMix	320
		Strobe	321
	#4	Dim	322
		R	323
		G	324
		B	325
		W	326
		ColorMix	327
		Strobe	328

機材名	#	Channel	DMX
KM LED ver.2	#5	Dim	329
		R	330
		G	331
		B	332
		W	333
		ColorMix	334
		Strobe	335
	#6	Dim	336
		R	337
		G	338
		B	339
		W	340
		ColorMix	341
		Strobe	342

機材名	#	Channel	DMX
KM LED ver.2	#7	Dim	343
		R	344
		G	345
		B	346
		W	347
		ColorMix	348
		Strobe	349
	#8	Dim	350
		R	351
		G	352
		B	353
		W	354
		ColorMix	355
		Strobe	356
	#9	Dim	357
		R	358
		G	359
		B	360
		W	361
		ColorMix	362
		Strobe	363
	#10	Dim	364
		R	365
		G	366
		B	367
		W	368
		ColorMix	369
		Strobe	370
	#11	Dim	371
		R	372
		G	373
		B	374
		W	375
		ColorMix	376
		Strobe	377

機材名	#	Channel	DMX
KM LED ver.2	#12	Dim	378
		R	379
		G	380
		B	381
		W	382
		ColorMix	383
		Strobe	384
	#13	Dim	385
		R	386
		G	387
		B	388
		W	389
		ColorMix	390
		Strobe	391
	#14	Dim	392
		R	393
		G	394
		B	395
		W	396
		ColorMix	397
		Strobe	398
	#15	Dim	399
		R	400
		G	401
		B	402
		W	403
		ColorMix	404
		Strobe	405
	#16	Dim	406
		R	407
		G	408
		B	409
		W	410
		ColorMix	411
		Strobe	412

機材名	#	Channel	DMX
ミラーボール	#1	Speed	481
		回転	482
PARストロボ	#1	Dim	491
		Speed	492
	#2	Dim	493
		Speed	494
	#3	Dim	495
		Speed	496
	#4	Dim	497
		Speed	498
	#5	Dim	499
		Speed	500
	#6	Dim	501
		Speed	502
	#7	Dim	503
		Speed	504
	#8	Dim	505
		Speed	506

機材名	Channel	DMX
デジファン	Fan	510
Antari F1	Fan	511
	Fog	512